



# ALIGNING THE SIDE-BY-SIDE MIRROR PANELS

- 1) MOUNT MIRRORS TO WALL ACORDING TO "WALL MOUNTING INSTRUCTIONS" FOUND IN MIRROR BOX.
- 2) WALL BRACKETS SHOULD BE SECURELY FASTENED AND NOT OVERLY TIGHT TO CAUSE TWISTING OF THE MIRROR.
- 3) IF THE ADJOINING MIRRORS DO NOT ALIGN, WE SUGGEST USING DOOR SHIM WEDGES-- SEE FIGURE 1 .

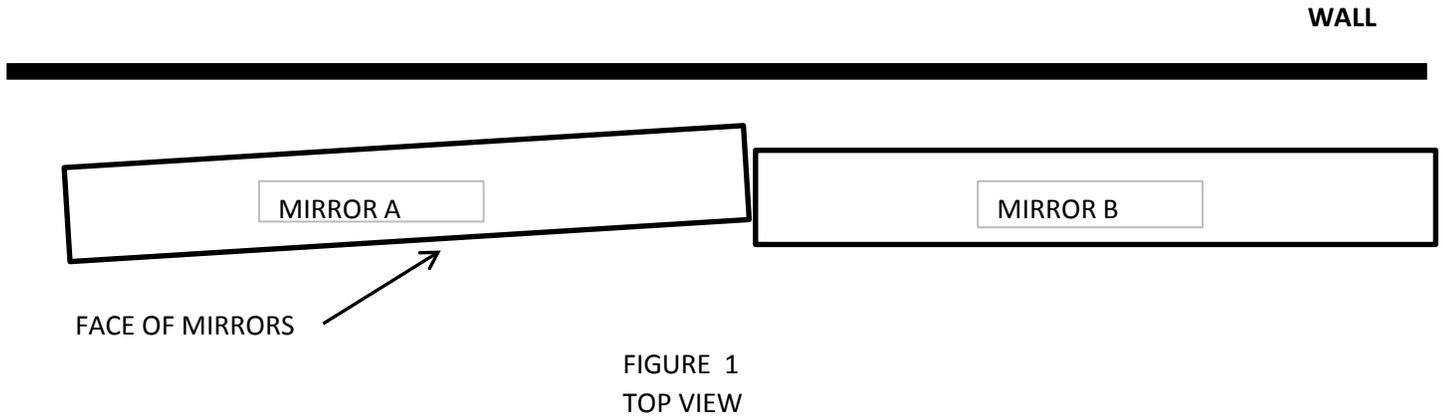

- 4) GENTLY PUSH BETWEEN THE WALL AND THE BACK OF THE MIRROR UNTIL FACE OF BOTH MIRRORS ARE EVEN-- SEE FIGURE 2.

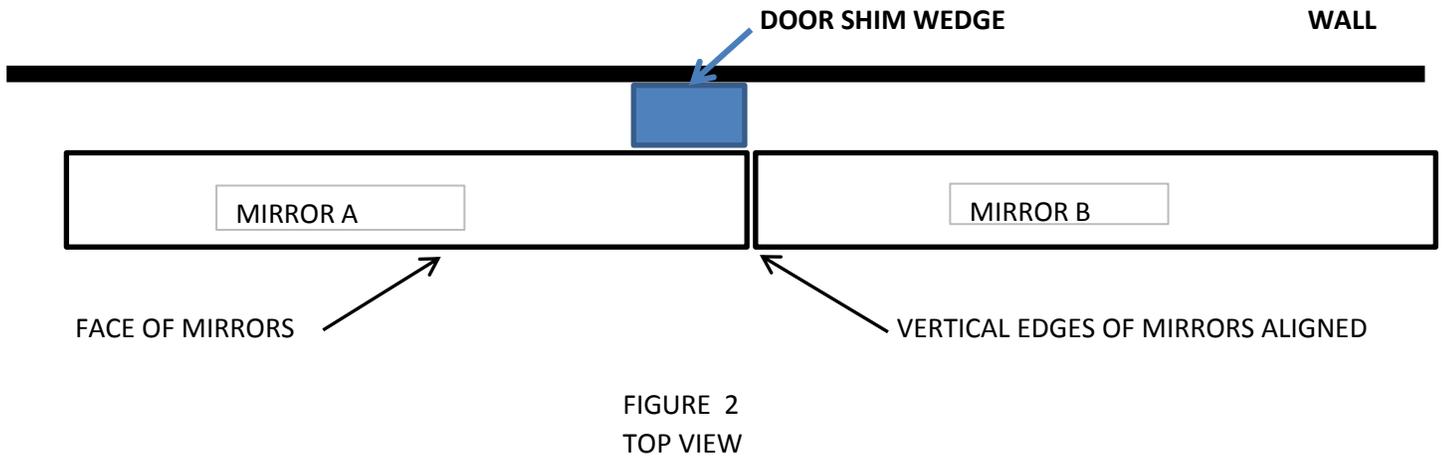

- 5) REPEAT SAME PROCEDURE FOR THE BOTTOM OF THE MIRROR PANELS.
- 6) CAREFULLY CUT AND TRIM THE BACK OF THE WEDGE PAST THE EDGE OF THE MIRROR.