

MIRRORLITE MIRROR CROSSBOLT CONNECTION

1) ALIGN MIRRORS WITH THRU-HOLE NEXT TO THREAD INSERT (RED TAPE)




2) INSTALL ¼-20 CONNECTING BOLT – DO NOT PUSH DOWN INTO OPENING TOWARD MIRROR FILM



3) TIGHTEN CROSSBOLTS EVENLY ALONG JOINED MIRROR LENGTH.



4) BACK OF JOINED MIRRORLITE PANELS

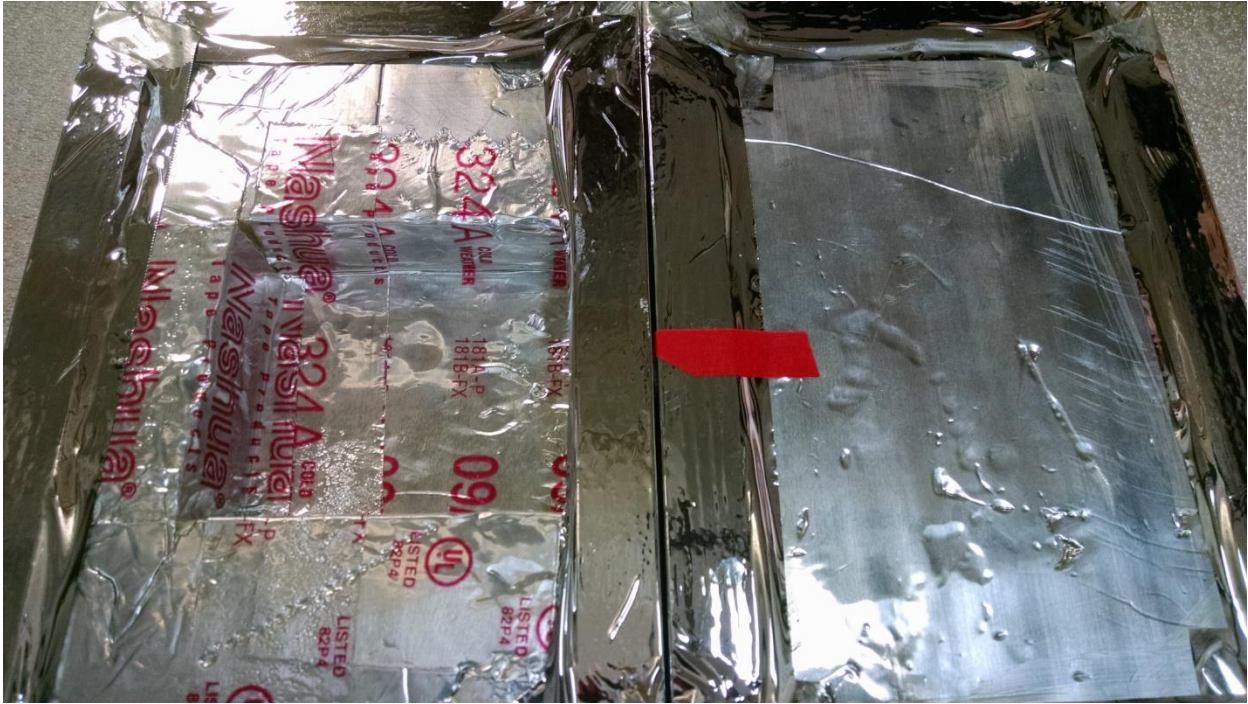

5) FRONT OF JOINED MIRRORLITE PANELS.

